

## LOG SPLITTER

FAILURE TO FOLLOW THE INSTRUCTIONS MAY CAUSE SERIOUS INJURY AND MAY CAUSE DAMAGE TO THE LOG SPLITTER

- Only adults are allowed to operate the Log Splitter
- Do not wear loose clothing or jewelry when operating the Log Splitter
- Always wear protective safety gear: goggles, tight fitting gloves without draw strings or loose cuffs, steel-toed boots, and ear plugs
- Always keep bystanders, including children and pets, at least twenty-five (25') feet away from the work area
- Do not, under any circumstances alter the Log Splitter
- Only one operator is allowed to load and operate the Log Splitter
- Remove all spilled gasoline, oil and lubricants before starting engine
- Do not operate the Log Splitter while being under the influence of alcohol, drugs or while taking medications
- Keep hands and feet away from all moving parts of the Log Splitter
- Use only your hand to operate the control lever.
- Do not use your foot, a rope or any other extension device to operate the control lever
- The design of this Log Splitter automatically stops when the cylinder is fully retracted
- Do not put your hands, fingers or thumbs on the top or the bottom of the log or use your feet to place or hold the log in position while the Log Splitter is in motion
- Do not straddle or reach across the splitting area when operating the Log Splitter
- Do not step over the Splitter when the engine is running because you may trip or accidentally engage the ram
- Always position log with hands on the side of the log
- Only split wood in direction of the grain
- Log must be firmly in place before splitting
- Do not stack or split more than one log at a time
- Do not attempt to load the Log splitter with the Hydraulic Cylinder and ram in motion
- Log Splitter is always to be operated outside in a well-ventilated area on solid, dry, level ground with wheel chocks in place
- Do not leave the Log Splitter engine running while unattended
- Do not operate Log Splitter at night
- Always keep work area clean of split wood, debris and all obstacles
- Do not add gasoline when engine is running or hot
- When Log Splitter is in vertical position **Safety Locking Pin** must **ALWAYS** be installed and in place
- Before towing gas switch must be in the **OFF POSITION**

### DISCLAIMER

Customers must read, utilize and understand manufacturer's safety and operating instructions prior to equipment operation. Rental Center may provide supplemental information; however, such supplemental information should not be used by Customer if it is in conflict with manufacturer's instructions. Ordinary rules of safety require machinery or equipment to be operated only in the manner and for the purposes for which it was designed.

